

FLINTSTONES BALL HANG-UP CORRECTION INSTRUCTIONS

To eliminate the ball hang-ups occurring near the bottom arch, remove the washers located on the top and bottom of the posts on the left and right sides of the bottom arch. These posts are under the clear portion of the bottom arch and above a purple triangle plastic piece.

1. Be sure the game is turned off and unplugged.
2. Open the coin door, slide the lever guide to the left and remove the front molding. Carefully, slide the playfield glass off of the game cabinet.
3. Remove the nut and washer on top of the post. Carefully, slide the bottom arch edge over the post. Unscrew the posts and remove the washer at the bottom.
4. Replace the post. Slide the bottom arch edge over the top of the post and replace the nut. Do Not replace the washers.
5. Lower the playfield, replace the glass and front molding. Close and lock the coin door.

