
Service Bulletin: SB 32


DATE: September 5, 1991

GAME: Terminator 2

SUBJECT: Terminator 2 Gun Handle Modification.

INFORMATION: IF YOU EXPERIENCE BINDING OF THE GUN TRIGGER, ADD A SPRING STOP TUBING (PART # 02-4588).

1. TURN OFF AND UNPLUG THE GAME. OPEN THE COIN DOOR AND SLIDE THE FRONT MOLDING LEVER TO THE LEFT THEN LIFT THE FRONT MOLDING OFF OF THE PLAYFIELD GLASS. CAREFULLY, REMOVE THE PLAYFIELD GLASS. TAKE THE STEEL BALLS OUT OF THE GAME AND LIFT UP THE PLAYFIELD.
2. REMOVE THE GUN HANDLE ASSEMBLY FROM THE CABINET. USE THE LONG ARM KEY AND A 3/8" NUT DRIVER TO REMOVE THE FOUR TAMPER-PROOF SCREWS AND FOUR NUTS HOLDING THE ASSEMBLY.
3. HOLD THE ASSEMBLY SO THE FIRING PIN AND THE PLATE SURROUNDING IT FACES YOU. REMOVE THE TWO PHILLIPS SCREWS HOLDING THE PLATE. REMOVE THE PLATE.
4. DROP THE SPRING STOP TUBING OVER THE SPRING AND FIRING PIN. REPLACE THE PLATE AND THE TWO PHILLIPS SCREWS. SQUEEZE THE TRIGGER TO BE SURE THE FIRING PIN EXTENDS OUT OF THE ASSEMBLY.
5. REATTACH THE GUN HANDLE ASSEMBLY TO THE GAME CABINET. NOTE: YOU MAY HAVE TO READJUST THE GRIP TRIGGER SWITCH (#34).
6. LOWER THE PLAYFIELD, REPLACE THE STEEL BALLS, THE PLAYFIELD GLASS, AND THE FRONT MOLDING. LOCK THE FRONT MOLDING. CLOSE AND LOCK THE COIN DOOR. TURN THE GAME BACK ON

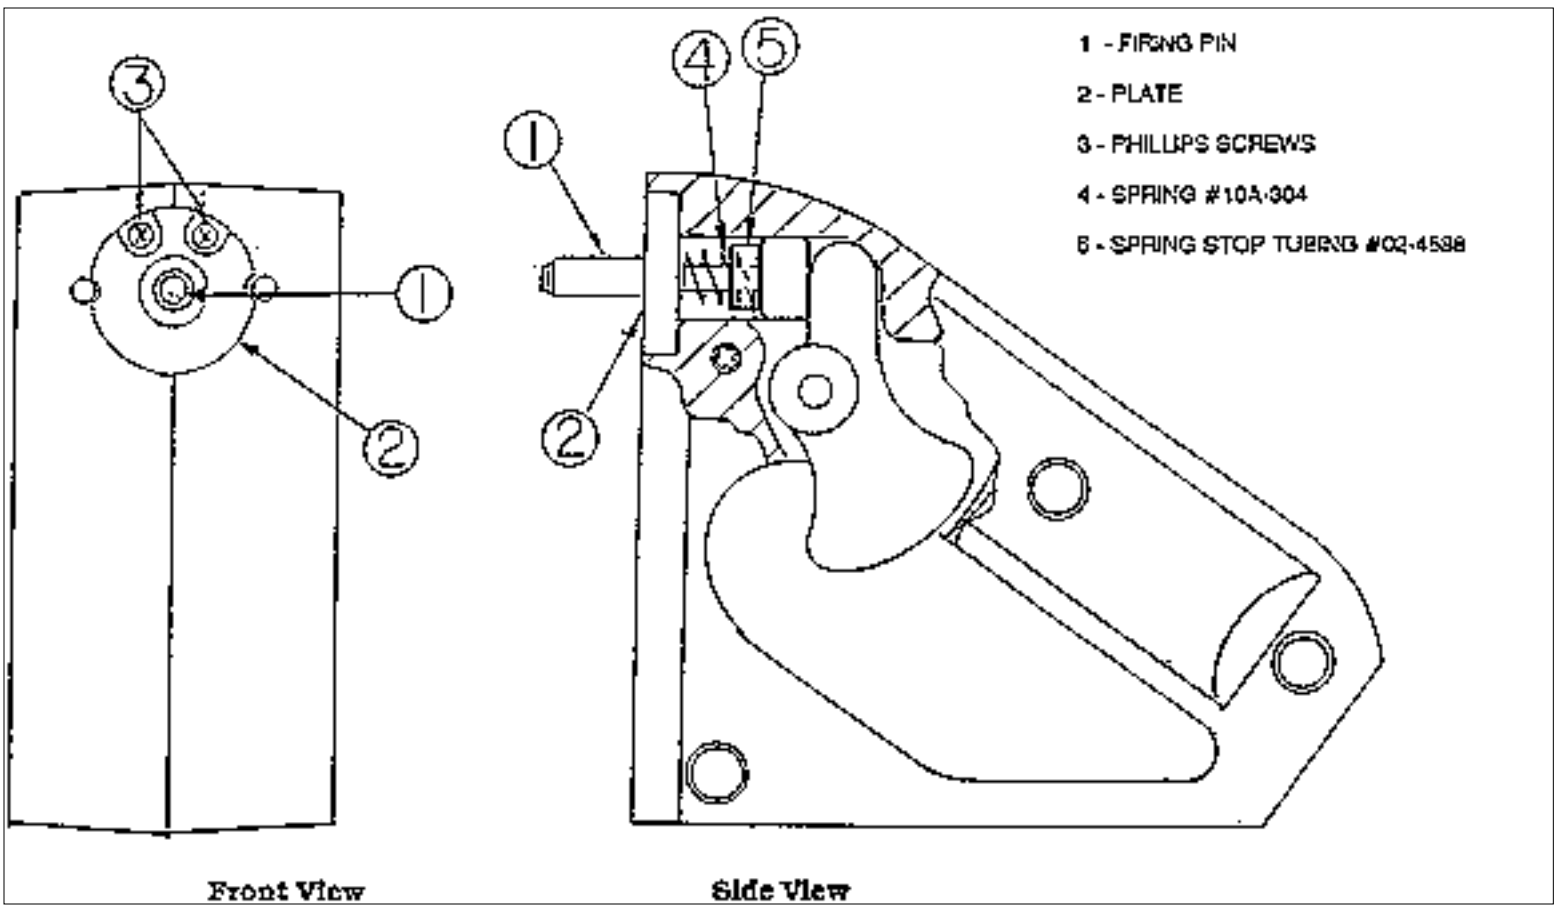

Thank you,
WMS GAMES Parts & Service INC.